

9	VCC	U9	
8	GND		
PAD	GND		
5	PA0_(ADC0/AREF/PCINT0)		
4	PA1_(ADC1/AIN0/PCINT1)		
3	PA2_(ADC2/AIN1/PCINT2)		
2	PA3_(ADC3/T0/PCINT3)		
1	PA4_(ADC4/USCK/SCL/T1/PCINT4)		
20	PA5_(ADC5/DO/MISO/OC1B/PCINT5)		
16	PA6_(PCINT6/OC1A/SDA/MOSI/DI/ADC6)		
15	PA7_(PCINT7/ICP/OC0B/ADC7)	DNC	6
		DNC	7
11	PB0_(PCINT8/XTAL1/CLKI)	DNC	10
12	PB1_(PCINT9/XTAL2)	DNC	17
14	PB2_(PCINT10/INT0/OC0A/CKOUT)	DNC	18
13	PB3_(PCINT11/RESET/dW)	DNC	19
	ATTINY24A-MLF		